

USER'S MANUAL

MULTIMEDIA SYSTEM



DODGE



MOPAR®

RBZ

MULTIMEDIA

CONTENTS

■ Safety Guidelines	3	□ Steering Wheel Mounted Controls (If Equipped)	9
■ Introduction	4	□ Audio Settings	11
□ Warnings	4	■ Getting Started	13
□ Safety References	4	□ Change The Language	13
□ Intended Use	4	□ Set The Time	13
□ System Care	4	□ Store Radio Presets	14
■ General Handling	7	■ Uconnect™ Multimedia (Radio)	16
□ User Interface Elements	7	□ Radio Mode	16

2 MULTIMEDIA

□ Radio Settings	19	□ Uconnect™ phone (If Equipped)	78
■ Uconnect™ Multimedia (Media)	25	□ Voice Command (If Equipped)	79
□ Disc Mode	25	■ System Information	80
□ Hard Disk Drive Mode (HDD)	34	□ User Data Backup	80
■ Uconnect™ Multimedia (Remote Devices)	56	□ Software And Database Updates	80
□ Sirius Backseat TV™ (If Equipped)	56	■ Troubleshooting	81
□ Video Entertainment System (VES)™	58	□ Radio	81
□ License Agreements	68	□ Disc	81
□ USB Connector	68	□ HDD	81
□ AUX Mode	72	■ Glossary Of Terms	82

SAFETY GUIDELINES

Ensure that all persons read this manual carefully before using the radio system. It contains instructions on how to use the system in a safe and effective manner.

WARNING!

Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- Glance at the screen only when necessary and safe to do so. If prolonged viewing of the screen is necessary, pull over at a safe location.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Make certain that the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.
- The law in some states prohibits the Front Seat DVD Viewer. As a result, it may be disabled prior to delivery to you. If you move to another state, you should consult your dealer for the proper enable/disable setting for your new state. Currently all states prohibit front seat video viewers except for: Arkansas, Delaware, Georgia, Hawaii, Idaho, Iowa, Kentucky, Mississippi, Missouri, Montana, North Dakota and Ohio.

INTRODUCTION

Warnings

This manual contains WARNINGS against operating procedures that could result in an accident or bodily injury. If you do not read the entire manual, you may miss important information. Observe all WARNINGS!

The information given in this manual is subject to change.

Safety References

Before operating this system for the first time, please read this manual carefully. Note the safety precautions described in this manual. If you have any questions, please contact the vehicle manufacturer or your authorized dealer.

Intended Use

Generally recognized rules of radio technology were maintained during the development and manufacture of

the radio system. When using this product, be aware of state/province-specific norms and guidelines.

Visit <http://www.chrysler.com/en/owners/mygig/> for updates, additional information, compatible phones, etc.

System Care

Software Update

The Gracenote® data is software updatable. Visit <http://www.chrysler.com/en/owners/mygig/> or contact your authorized dealer for the latest available software.

Safe Usage of the Radio System

Read all instructions in this manual carefully before using your radio system to ensure proper usage!

Your radio is a sophisticated electronic device. Do not let young children use your radio.

Permanent hearing loss may occur if you play your music or the radio at loud volumes. Exercise caution when setting the volume on your radio.

Driving is a complex activity that requires your full attention. If you're engaged in driving or any activity that requires your full attention, we recommend that you not use your radio.

NOTE: Many features of this radio are speed dependent. For your own safety, it is not possible to use the touch screen keyboard while the vehicle is in motion.

Keep drinks, rain, and other sources of moisture away from your radio. Besides damage to your radio, moisture can cause electric shocks as with any electronic device.

NOTE: In a convertible vehicle, the system performance may be compromised with the roof top down.

Connections

Never force any connector into the ports of your radio. Make sure your connectors are the correct shape and size before you connect.

Any attached cable should be routed so that it will not apply any pressure to the connection.

Do not use a USB device which will interfere with the operation of opening the display.

Touch Screen

Do not touch the screen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touch screen surface!

NOTE: It is possible to use a plastic stylus for press screen enabled devices such as a PDA and Pocket PCs.

Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touch screen.

If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol, or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

CD/DVD Drive

Do not insert any damaged, warped, scratched or dirty CDs or DVDs into the CD/DVD player.

Discs that have been modified with an adhesive label should not be used in the CD/DVD player.

Do not insert more than one CD/DVD at a time into the drive slot.

Do not insert anything other than the supported CD/DVD formats. See the **Disc Mode** section in this manual for information on supported CD/DVD formats.

Satellite Radio Antenna – If Equipped

The antenna for the satellite radio and SIRIUS Backseat TV™ is mounted on the roof of the vehicle. Do not place items on the roof around the roof top antenna location. Objects placed within the line of sight of the antenna will cause decreased performance. Larger luggage items should be placed as far forward as possible. Do not place items directly on or above the antenna.

GENERAL HANDLING

User Interface Elements



Power to operate the radio is supplied through the ignition switch, which must be in the ON, ACC or in ACC Delay mode in order to operate the radio.


Soft-Keys

Soft-keys are accessible on the touch screen.


Hard-Keys

Hard-keys on the left and right side of the radio faceplate.

(1) Voice Command (If Equipped)

Press the Voice Command  hard-key (1) and wait for the confirmation beep before you say a voice command.

(2) Uconnect™ Phone (If Equipped)

Press the Uconnect™ Phone  hard-key (2) to either activate the Uconnect™ system or to cancel an active phone call.

(3) RADIO

Press the RADIO hard-key (3) to change to a RADIO mode or to toggle between RADIO modes.

(4) MEDIA

Press the MEDIA hard-key (4) to change to a MEDIA mode or to toggle between MEDIA modes.

(5) ON/OFF VOLUME

It is also possible to set the unit in standby mode during driving by pressing the ON/OFF VOLUME rotary knob (5).

NOTE: If the ignition is switched OFF with the radio in standby mode, the radio memorizes the standby state when the ignition is switched ON again. Press the (5) ON/OFF VOLUME rotary knob to switch the radio ON. The radio software is always working when the ignition is switched ON, even if the radio is in standby mode. It is still possible to eject the CD and to display the time if the unit is switched OFF.

(6) LOAD

To open or close the display, press the LOAD hard key (6).

After opening the display, it takes a few seconds to eject a CD/DVD, if one was in the slot.

When inserting a disc, make sure the label is facing up.

The display will close automatically after inserting the disc.

NOTE: It may take several seconds to recognize the type of inserted disc (CD, DVD, MP3, etc.).

(7) MENU

Press the MENU hard-key (7) to access the system settings menu.

NOTE: Press the MENU hard-key in an active mode in order to change mode specific settings.

(8) AUDIO

Press the AUDIO hard-key (8) to switch to the audio mode, which allows access to speaker fade and tone controls.

(9) MY FILES

Press the MY FILES hard key (9) to manage your music and picture files on the internal storage drive.

(10) USB Connector

Connect a supported device into the USB Connector (10) in order to copy files to the internal hard disk drive.

NOTE: See the USB Connector section of this manual for information on supported devices.

(11) AUX Connector

Connect an external audio device into the AUX Input (11) (e.g., MP3 player, video-game) to play the device audio through the car audio system.

Electronic Vehicle Information Center (EVIC)

Some vehicles feature an Electronic Vehicle Information Center (EVIC) with driver-interactive display. The EVIC

is normally located in the instrument cluster or overhead. It can display radio station frequencies, CD disc number, and satellite radio channel.

Steering Wheel Mounted Controls (If Equipped)

The remote sound system controls are located on the rear surface of the steering wheel. Please refer to the vehicle specific Owner's Manual on the DVD for detailed information.

The following describes general steering wheel functionality:

1. The VOLUME rocker switch, located on the right, controls the volume of the sound system. Pressing the top of the rocker switch will increase the volume and pressing the bottom of the rocker switch will decrease the volume.

2. The **MODE ADVANCED** button, located in the center of the right rocker switch, changes the mode of the radio between the various modes available (FM, AM, CD, DVD, SAT, TV, etc.).
3. The **FUNCTION SELECT** button, located in the center of the left rocker switch, advances the radio to the next preset. The function is different depending upon which mode is in use.
4. The **SCROLL** rocker switch, located on the left, changes selections such as radio station, CD track, and satellite radio channel, depending upon the current mode.

The following describes the operation of the **SCROLL** switch in each mode:

AM/FM/SAT Operation

Pressing the top of the switch will seek up for the next available station and pressing the bottom of the switch will seek down for the next available station.

HDD/Disc/iPod® Operation

Pressing the top of the switch will go to the next track on the disc, and pressing the bottom of the switch will go to the beginning of the current track, or to the beginning of the previous track (if the current track has just started).

Video Entertainment System™ Operation

If equipped with a remote video player, this control will function the same way as in disc mode.

SIRIUS Backseat TV™ Operation

If equipped with a SIRIUS Backseat TV™, this control will function the same way as in SIRIUS Satellite Radio mode.

Audio Settings

Volume

Use the ON/OFF VOLUME rotary knob (4) to adjust the volume of the currently playing audio source. While you adjust the volume, the name of the audio source and a volume indicator is displayed in the lower left corner of the display.

Audio Control Menu

Press the AUDIO hard-key (8) on the right side of the radio.



12 MULTIMEDIA

Use either the arrow soft-keys or the cross-hair on the screen to change Balance and Fade. The CENTER soft-key resets the settings. Press EQUALIZER soft-key to change tone settings.

Use either the arrow soft-keys or the sliders on the screen to adjust BASS, MID, and/or TREBLE.



GETTING STARTED

NOTE: The ignition switch must be in the ON or ACC position to operate the radio.

If the unit is OFF, switch it ON by pushing the ON/OFF VOLUME rotary knob.

Change the Language

The radio will conform to the vehicle language set in the Electronic Vehicle Information Center (EVIC), if equipped.

If you change the language in the radio, the vehicle will change the language for all display information. Refer to the vehicle's Owner's Manual on the DVD.

To change the language with the radio:

1. Press the MENU hard-key on the right side of the radio.

2. Then press the System Setup soft-key to get to the System Setup menu.



3. Press the Language soft-key and select a language.

Set the Time

1. Press the Time display in the lower left corner of the screen.



2. Adjust the hours and minutes using the up and down soft-keys.
3. Press the Set Time Zone soft-key to change to the desired time zone.
4. Press the Daylight Savings soft-key to switch Daylight Savings on or off.

Store Radio Presets

1. Press the RADIO hard-key to display AM FM SAT.



2. Select the radio band by touching either the AM, FM or SAT soft-key.

3. Either press the SEEK up/down soft-keys, or touch the SCAN soft-key, DIRECT TUNE soft-key, or the left and right arrows to change the currently playing station.
4. Touch and hold one of the PRESET soft-keys in the list to the right until you hear a confirmation beep (approximately two seconds).



You can use the PAGE soft-key to scroll through the list of presets.

NOTE: If the preset list is not displayed, press the PRESETS soft-key located in the bottom line of the screen.



You can use the FULLSCREEN soft-key to toggle between full- and split-screen mode. Long preset names are displayed in full-screen mode.

Uconnect™ Multimedia (RADIO)

Radio Mode

Overview

The radio is equipped with four different tuners:

- FM 87.7 MHz - 107.9 MHz (RBDS capable)
- AM 530 kHz - 1710 kHz
- SAT SIRIUS Satellite Radio (if equipped)
- TV SIRIUS Backseat TV™ (if equipped)

Press the RADIO hard-key. The different tuner modes can be selected via the tabs in the radio screen.

Satellite Radio Mode

In order to receive satellite radio, the vehicle needs to be outside with a clear view to the sky. If the screen shows Acquiring Signal, you might have to change the vehicle

position in order to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.





Station Presets

There are 12 station presets available for storing the radio stations in each tuner range.


In order to store the desired station, touch and hold one of the station preset soft-keys for two seconds and you will see the highlighted soft-key change from green to beige. You will also see the radio station stored in the highlighted soft-key, and you will hear a confirmation beep when the station is saved.

Change a Channel or Frequency

Press the seek/tune down arrow soft-key  to quickly seek down to the next available station or channel.

Press and hold the seek/tune down arrow soft-key  to tune down until the soft-key is released.

Press the seek/tune up arrow soft-key  to quickly seek up to the next available station or channel.

Press and hold the seek/tune up arrow soft-key  to tune up until the soft-key is released.

Select the DIRECT TUNE soft-key to enter a frequency or a channel number, and confirm your selection by pressing the GO soft-key.

Select SCAN for a five-second preview of each listenable station in the frequency band. Touch the SCAN soft-key again to stop the scan function and to select a radio station.

Radio Broadcast Data System (RBDS)

This radio system is capable of receiving RBDS signals in the FM band. RBDS is a technology used for transmitting textual information about the music type, song and artist for FM band music. This information is shown on the display.

NOTE: Not all radio stations support RBDS.

The RBDS information is displayed below the frequency reading of the currently playing radio station.

Radio Text Information

Select INFO to display additional radio text information in the right half of the screen.

Select CLOSE INFO to hide additional radio text information.

Music Type (Program Type Filter)



Program Type (PTY) is only available in FM and SAT mode. Radio stations are grouped according to their program (e.g., Soft Rock, Rhythm & Blues, etc.).

Select MUSIC TYPE to enable and/or disable desired program types. The SEEK and SCAN function will then only display stations with matching program types.

 You can use the BACK soft-key to switch to the previous menu.

RBDS (FM) Program Types

Adult Hits, Classic Rock, Classical, College, Country, Information, Jazz, Language, News, Nostalgia, Oldies, Personality, Public, Religious Music, Religious Talk, Rhythm and Blues, Rock, Soft, Soft Rhythm and Blues, Soft Rock, Sports, Talk, Top 40, Weather.

SIRIUS Satellite Radio Program Types

Pop, Rock, Electronic/Dance, Hip-Hop/R&B, Country, Christian, Jazz/Blues, Standards, Classical, Latin, International, Talk, Comedy, Lifestyles, Family & Kids, Sports Talk & News, NFL, More Sports, NBA, Financial News, US News, Public Radio, International News, Public Radio, Weather, Religion.

You can find SIRIUS' current terms and conditions at <http://www.sirius.com>.

Radio Settings

AM/FM MENU

There are no specific settings for this mode.

SAT MENU

While in SAT Mode, press the MENU hard-key to display the SAT Menu.



Channel vs. Presets List Selection

Select Presets List to display only user presets on the right side of the SIRIUS Satellite Radio screen. Press PRESETS/HIDE LIST in the SAT screen to turn the presets list on or off.

Deselect Presets List to display all channels on the right side of the SIRIUS Satellite Radio screen. Press CHANNELS/HIDE LIST in the SAT screen to turn the list on or off.

Channel Lock

Select Channel Lock to enable and/or disable desired channels. The SEEK and SCAN function will then only display channels without parental lock.

Re-Subscribe to SIRIUS Satellite Radio

New vehicle purchasers or lessees will receive a free one-year subscription to SIRIUS Satellite Radio with your radio. Following expiration of the one-year free services, it will be necessary to access the information on the Subscription Information screen in order to re-subscribe.

Touch the Subscription soft-key to access the Subscription Information screen.



Write down the SIRIUS ID numbers for your receiver. To reactivate your service, either call the number listed on the screen or visit the provider online.

SAT VIDEO MENU (if equipped)

While in SAT-V mode, press the MENU hard-key to display the SAT Menu.



Re-Subscribe to SIRIUS Backseat TV™

New vehicle purchasers or lessees will receive a free one-year subscription to SIRIUS Backseat TV™ with your radio. Following expiration of the one-year free services, it will be necessary to access the information on the Subscription Information screen in order to re-subscribe.

Touch the Subscription soft-key to access the Subscription Information screen.



Write down the SIRIUS ID numbers for your receiver. To reactivate your service, either call the number listed on the screen or visit the provider online.

NOTE: SIRIUS Backseat TV™ is not currently available in Canada.

Display Settings

Press the MENU hard-key and touch the Display Setting soft-key to access the Display Settings menu.



Select the Daytime Colors soft-key to switch to manual daytime mode and to adjust the brightness of the display using daytime colors.

Select the Nighttime Colors soft-key to switch to manual nighttime mode and to adjust the brightness of the display using nighttime colors.

Select the Auto Color soft-key to switch to automatic daytime/nighttime mode and to control the brightness of the display using the light switch of the vehicle.

Touch the DONE soft-key to save your settings and to return to the AM/FM/SAT Menu.

Screen Off

To turn off the screen (so only the clock is shown, and audio is still heard through the vehicles speakers), press the MENU hard-key and touch the Screen Off soft-key.

Once the Screen Off is active, press any hard-key or touch the display to deactivate it.

View Settings

Press the MENU hard-key and touch the Default View soft-key to enable the default view mode, where the vehicle brand logo is displayed in the right half of the screen.

Touch the Picture View soft-key to enable the picture view mode, where a picture can be displayed on the right half of the radio screen. Refer to the Hard Disk Drive section for a detailed example.



Parkview® Rear Back Up Camera (if equipped)

When equipped with Parkview®, the radio display shows the rear view camera picture as soon as the shift lever is in the R position for vehicles with automatic transmission. In vehicles with manual transmission the reverse gear must be engaged.

Uconnect™ Multimedia (MEDIA)

Disc Mode

Overview

The radio is equipped with a CD/DVD player.



To activate DISC mode, press the MEDIA hard-key and select the DISC tab soft-key.

Disc Requirements

CAUTION!

This disc player will accept 4 3/4 in (12 cm) discs only. The use of other sized discs may damage the disc player mechanism.

The radio is capable of playing compact discs (CD), recordable compact discs (CD-R and CD+R), rewritable compact discs (CD-RW and CD+RW), recordable DVD-R, DVD+R, DVD-RW, and DVD+RW compact discs.

Your radio will play the following formats:

MP3, WMA, AAC, M4A, CD Audio, DVD Audio, and DVD Video.

Do not insert anything other than the supported CD/DVD formats.

SACD (SACD layer), VCD DualDisc, SVCD, VCD format on DVD MPEG-4 are not supported.

A complete list of supported CD/DVD formats is available at <http://www.chrysler.com/en/owners/mygig/>.

Inserting a Disc

1. Press the LOAD hard-key once.
2. After the screen opens, with the printed side upward, insert the disc into the disc slot of the radio. The radio pulls the disc automatically and closes the flip screen. The radio selects the appropriate mode after the disc is recognized, and starts playing the first track. The display shows "Reading..." during this process.

NOTE: A faulty CD is NOT automatically ejected. Use only standard size discs. Discs that have been modified with an adhesive label should not be used in the CD/DVD player.

High definition content and media (e.g., HD-DVD, Blu-Ray) is not supported.

If the user does not remove an ejected CD within approximately 10 seconds, the CD will reload.

NOTE: On Data CDs with a large number of songs, it may take several seconds to read, play, and display information for all songs on the disc.

NOTE: Recording your own CD on a home computer at a lower write speed will result in a more consistent quality.

Removing a Disc

1. Press the LOAD hard-key.
2. After the display opens, the disc is ejected and can be removed.

NOTE: If the disc is not removed within approximately 10 seconds, the unit pulls it back into the slot (park position). The disc may be ejected when the ignition is OFF.

3. If you do not press the LOAD button or insert a new disc, the display will close 30 seconds after the display was opened.

Selecting Disc Mode

Activate Disc Mode by pressing the MEDIA hard-key. The disc mode can be selected by touching the Disc tab soft-key.

NOTE: When a disc is inserted, the appropriate mode is automatically selected once the disc is recognized.

Scan Search


Touch the SCAN soft-key.


The first few seconds of each individual track will be played in succession.

Select the STOP SCAN soft-key to stop the scan function.

Change a Track

Press the forward arrows soft-key  to select the next track on the disc.

Press and hold the forward arrows soft-key  to fast forward through the track.

Press the rearward arrows soft-key  to select the start of the current track (while the track is playing) or the previous track (if the current track has just started).

Press and hold the rearward arrows soft-key  to fast rewind through the track.

Press the pause soft-key to pause the playback of the disc.

Press the play soft-key to resume playback of the disc.

Displaying the Elapsed Title Time

The elapsed title time of the currently playing track is displayed in the left center of the screen.

Select Title from List


Select LIST to display a list of the titles of the currently playing disc. Select the desired track you wish to play.

Select HIDE LIST to hide the list.

Disc Info

Select INFO to display Title, Artist, Album, or Genre information in the right half of the screen.

Select CLOSE INFO to close the information.

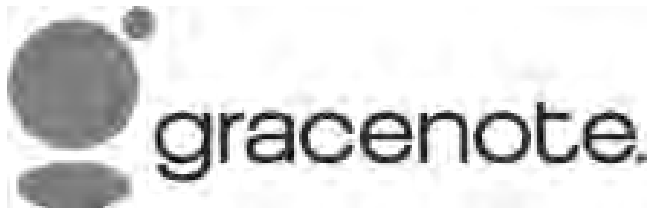
Gracenote® Music Recognition Technology

This radio is equipped with the Gracenote® Music Recognition Service, with an embedded database to look up album, song title, genre and artist information. Data will be found for most Audio CDs (CDA discs). Tag information from your music files (MP3, WMA, AAC, M4A) will be displayed when the data is embedded in the file.

Music recognition technology and related data are provided by Gracenote®. Gracenote® is the industry standard in music recognition technology and related content delivery. For more information visit www.gracenote.com.

NOTE: Visit <http://www.chrysler.com/en/owners/mygig/> for update information.

Copy Disc to Hard-Drive

Press the copy soft-key  to copy the current disc to the Hard Disc Drive.

Disc Menu

While in disc mode with inserted audio disc, press the MENU hard-key to access the Disc Menu.

Select Random to play the titles on the disc in random order. Select Random again to turn Random off.

Select Repeat Folder to repeat all songs in the currently playing folder (MP3/WMA disc only). Touch the Repeat Folder soft-key again to stop the repeat mode.

Playing a MP3/WMA Disc

1. Press the OPEN/CLOSE hard-key once.
2. With the printed side upwards, insert the disc into the disc slot of the radio. The radio pulls the disc automatically and closes the flip screen. The radio selects the appropriate mode after the disc is recognized, and starts playing the first track. The display shows "Reading..." during this process.

A MP3/WMA disc may contain audio files in a folder structure. The folder, if any, is shown in the list view.

Touch the BROWSE soft-key if the list is not displayed.

3. Touch a soft-key with a folder symbol to open a folder.



4. Touch the BACK soft-key to close a folder.

Playing a Video DVD

NOTE: Viewing a DVD video on the radio screen is not available in all states, and the vehicle must be stopped, and the shifter must be in position P for vehicles with an automatic transmission. In vehicles with a manual transmission, the parking brake must be engaged.

First insert a video DVD.



The playback starts automatically after the DVD video is recognized by the disc drive.

Touch the LIST soft-key to display a list of available chapters or tracks. Touch a chapter or track soft-key in the list to start playback from the selected section.


Touch the VIEW VIDEO soft-key to view the video on the screen.


DVD MENU Controls

If you insert a DVD video disc that contains a top menu, a menu may appear.



Touch the cursor arrows soft-keys to select the title you want to view, then touch the ENTER soft-key to start playback.

 Touch the DVD move soft-key to move the controls to the right part of the screen.

 Touch the close soft-key to close the DVD MENU Controls.

DVD Playback Controls

In video playback mode, touch anywhere on the screen to show the DVD playback controls.



To pause playback, touch the Pause soft-key.


To stop playback, touch the Stop soft-key.


Touch the Fast Reverse soft-key during playback to fast reverse playback.

Touch the Fast Forward soft-key during playback to fast forward playback.

Touch the NEXT soft-key to locate succeeding chapters or tracks.

Touch the PREV soft-key to start playback from the beginning of the current chapter or track. When you press twice in quick succession, playback starts from the beginning of the preceding chapter or track.

 Touch the DVD move soft-key to move the controls to the right part of the screen.

 Touch the close soft-key to close the DVD MENU Controls.

DVD Video Menu

While in disc mode with inserted video DVD, press the MENU hard-key to access the DISC Menu.



Touch the DVD Setup soft-key to access the DVD Setup menu.



In the DVD Setup menu, you may select Menu Language, Audio Language, Subtitle, Camera Angle, Aspect Ratio, and Brightness settings by pressing the corresponding soft-key. Some of the soft-keys are disabled if the inserted disc does not support the functionality.

Disc Skipping

Skipping is typically caused by a damaged (scratched) disc. This will result in a 10-second jump forward until the damaged area is passed.

Temperature Protection

If the temperature of the disc reader during operation becomes too high, a popup message will inform the user of an over temperature situation. The unit switches to radio mode until the disc reader temperature has dropped to a normal level.

Hard Disk Drive Mode (HDD)

The HDD mode gives you access to the audio files on the internal hard disk drive. It functions similar to a CD player, with the exception that the internal HDD can hold more tracks. It can hold approximately 6,700 four-minute CD-quality songs.

Before using the HDD mode, you will need to copy tracks to the internal hard drive.

The files will be stored on the internal hard disk drive and can be used in the HDD mode.

Copy Audio Disc to Hard-Drive

1. Insert a disc.



2. Touch the copy soft-key  to copy music tracks of the inserted disc to the Hard Disk Drive.

After a short pause, the copy process begins and the audio resumes playback from the start of the track. The copy process continues in the background while the audio plays. The progress is shown in the display. Even if you change to another mode (radio, AUX, etc.) or turn the radio OFF (ignition ON), the copy process will continue in the background.



The copy progress is shown in the display.

It is also possible to listen to radio modes during this process. Copying time is greater than 4x the normal playback rate.

NOTE: When copying CD-Audio to HDD, audio files are converted from CD-Audio to AAC. DVD-Audio cannot be copied to the HDD.

Copy WMA/MP3 Files to Hard-Drive

MP3 and WMA formatted compressed audio files from a disc or via USB (e.g., USB stick) can be copied to the Hard Disc Drive.

It is recommended to sort music files into folders.

Example:

MP3DISC	
Name	Kind
Song1.mp3	Audio File
Song2.mp3	Audio File
Song3.wma	Audio File
▼ My Playlist Folder1	Folder
Song1.mp3	Audio File
Song2.mp3	Audio File
Song3.mp3	Audio File

Songs located in the root level (top level) of the disc or USB device are saved in a playlist named Root_Level_Songs.

Once the songs are copied, the playlist will be named by the originating folder name.

For the example above, the list on the HDD will show the following:

Disc_Root_Level Songs (Playlist 1)

- Song 1.mp3 (First song in playlist 1)
- Song 2.mp3 (Second song in playlist 1)
- Song 3.wma (Third song in playlist 1)

My Playlist Folder 1 (Playlist 2)

- 01 Song.mp3 (First song in playlist 2)
- 02 Song.mp3 (Second song in playlist 2)
- 03 Song.mp3 (Third song in playlist 2)

Copying Complete Disc

1. Insert a disc with MP3, WMA files.



2. Touch the copy soft-key  to copy music files of the inserted disc to the hard disk drive.

The copy progress is shown in the display.

It is possible to listen to radio modes during this process.

Selective Song Copying from Disc

You can select specific songs on a WMA/MP3 disc using the following procedure:



1. Touch the MY FILES hard-key.




2. Select My Music.



3. Touch the Import Music Files soft-key.

4. Touch the From DISC soft-key in the next screen.

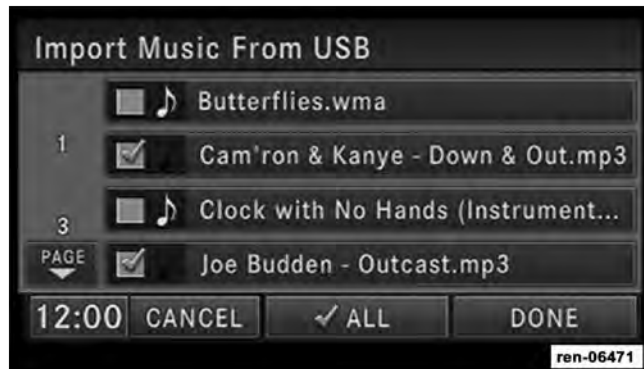

5. Select the folders or titles you would like to copy.

A red check mark indicates the selected songs and/or folders. Touch the ALL soft-key to select all files and folders at once.

6. Touch the DONE soft-key to start the copy process.

The copy process is shown on the display. It is possible to listen to radio modes during this process.

If you unplug or eject the media before the copying process is finished, the process will be interrupted. You may restart the copying process by repeating the steps above.

Copying from USB


1. Insert a USB device.



2. Select My Music.



3. Touch the Import Music Files soft-key.
4. Touch the From USB soft-key in the next screen.

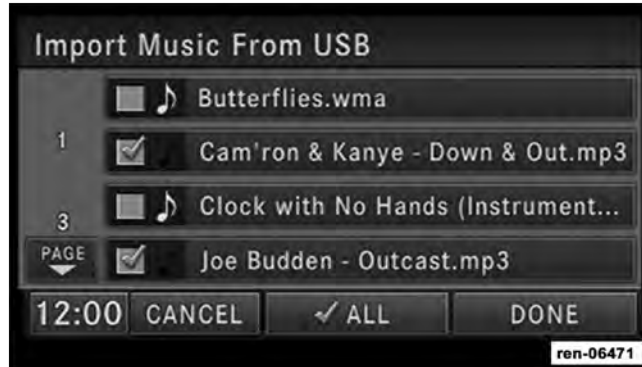

5. Select the folders or titles you would like to copy.

A red check mark indicates the selected songs and/or folders. Touch the ALL soft-key to select all files and folders at once.

6. Touch the DONE soft-key to start the copy process.

Playing Audio Files from the Hard Disk Drive

You can play songs directly from the internal hard disk drive.




1. Touch the BROWSE soft-key to select an available category.

The radio can sort the files by playlist, by song name, by artist, by genre, by album, or by favorites.




2. For this example, touch the Playlists soft-key.

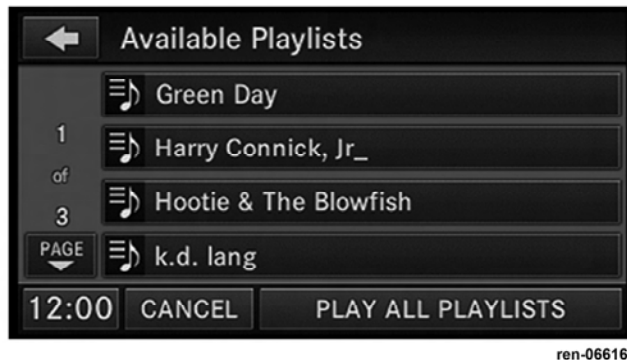


3. Touch a soft-key with the desired playlist name to play a playlist.

Touch the PLAY ALL PLAYLISTS soft-key to play all available playlists.

Change a Track

Press the forward arrows soft-key  to select the next track on the disc.

Press and hold the forward arrows soft-key  to fast forward through the track.

Press the rearward arrows soft-key  to select the start of the current track (while the track is playing) or the previous track (if the current track has just started).

Press and hold the rearward arrows soft-key  to fast rewind through the track.

Press the pause soft-key to pause the playback of the disc.

Press the play soft-key to resume playback of the disc.

Displaying the Elapsed Time

The elapsed time of the current playing track is displayed in the left center of the screen.

HDD Menu

While in HDD mode, press the MENU hard-key to access the HDD Menu.

Random Playback

The random play function plays random tracks from the hard disk drive. Touch the Random soft-key to switch the random play function on or off.

A red check mark indicates the random play function is active.

Repeat Track

The repeat track function repeats the currently played track. Touch the Rpt. TRK soft-key to switch the repeat track function on or off.


A red check mark indicates the repeat track function is active.

Favorite Playlists on the Hard Disk Drive

You may save links to favorite playlists in the Favorite Playlists list.




1. While in the HDD mode, touch the BROWSE soft-key to access the Browse Categories menu.

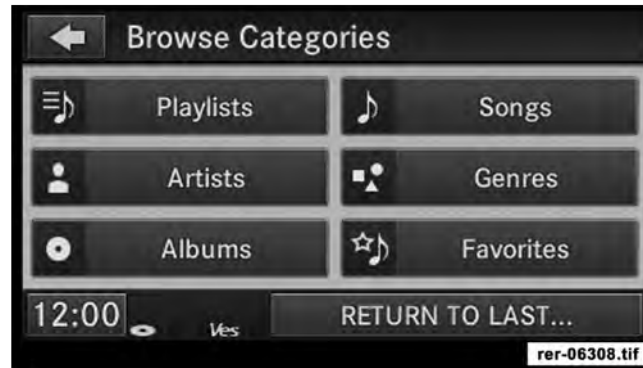

2. Touch the Favorites soft-key to display a list of favorite playlists.



3. Touch one of the ADD FAVORITE soft-keys.

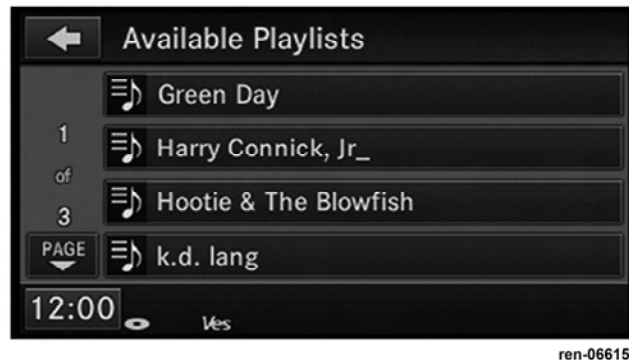

4. Select the desired playlist.



A link to the selected playlist is now saved in the Favorite Playlists list.

NOTE: The link to the favorite playlist will be removed after a playlist was removed from the My Playlists menu. Refer to Editing Playlists in the Hard Disk Drive section of this manual.

You may now edit the list by touching the EDIT soft-key, or exit the list by touching the EXIT soft-key.

Editing Playlists on the Hard Disk Drive



1. Touch the MY FILES hard-key.



2. Select My Music.



3. Touch the My Playlists soft-key.



4. Touch the EDIT soft-key (example: DISC_Root_Level_Songs) of the playlist you would like to edit.

NOTE: You cannot edit a playlist during the copy process.

You can rename the selected playlist, delete songs from the selected playlist, or delete the selected playlist.




5. Touch the Rename This Playlist soft-key.

NOTE: If you touch the Delete This Playlist soft-key, the playlist and all songs contained in it will be permanently deleted. Neither the song nor playlist can be recovered.



6. Type in a new name for the playlist.
7. Touch the SAVE soft-key to confirm the name.

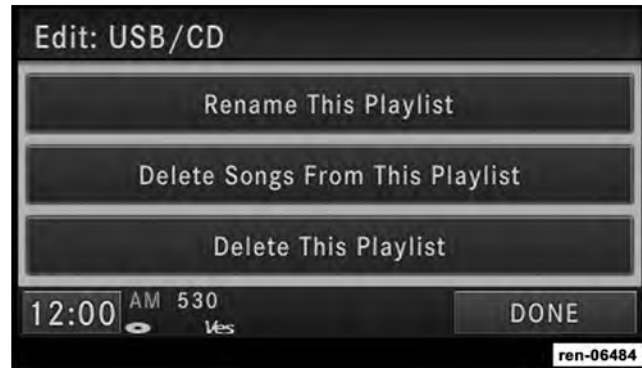

The playlist now has the new name.

8. Touch the Delete Songs From This Playlist soft-key.

NOTE: If you touch the Delete This Playlist soft-key, the playlist and all songs contained in it will be permanently deleted. Neither the song nor playlist can be recovered.



9. Select the titles you would like to delete.

A red check mark indicates the selected songs.

10. Touch the DELETE soft-key to start the delete process.

NOTE: If you delete a song from the playlist, the song cannot be recovered.


11. Touch the DONE soft-key when you are done editing the playlist.

Deleting All Playlists from the Hard Disk Drive

1. Press the MENU hard-key on the right side of the radio.

2. Touch the System Setup soft-key to access the System Setup menu.

3. Touch the Manage HDD soft-key to access the Manage HDD menu.

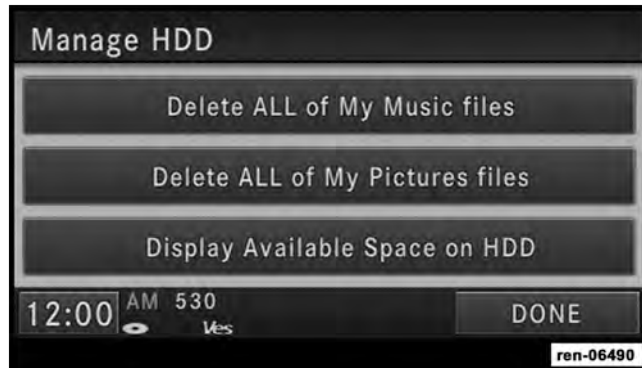

This menu displays the available space on the hard disk drive and allows you to delete pictures and music files.

Importing Pictures

It is possible to import display pictures to the internal hard disk drive. The pictures can be displayed on the right half of the radio screen.



In the default mode, the vehicle brand logo is displayed in the right half of the screen. Press the MENU hard-key on the right side of the radio to access one of the setting menus.

It is recommended to change the picture dimensions on a PC or Digital Camera to 240 by 158 pixels before the import.

NOTE: USB devices (e.g., camera memory USB adaptors, etc.) must comply with the MSD (Mass Storage Device) standard. This USB terminal can provide power to the inserted device. The device's current limitation must be less or equal to 500mA.

1. Touch the MY FILES hard-key to go to the Manage My Files screen.



2. Insert either a CD or a USB Stick containing your pictures.
3. Touch the My Pictures soft-key to get an overview of the currently stored images.



The radio can store 24 user pictures.

4. Press one of the Add Pictures soft-keys.

5. Select the type of media inserted.



6. Use the PAGE soft-keys to page through a list of pictures and press the picture you would like to import.

NOTE: Files must be in the root directory (top level) of the disc or USB device to be recognized.



7. Confirm your selection by touching the YES soft-key.



The imported picture is now available in the Manage My Pictures screen.

8. In order to display the imported picture in the radio screen, touch the desired picture soft-key.



9. Select this picture by pressing the Set as Default soft-key. A check mark indicates the currently used picture.

Use the PREV or NEXT soft-key to step through the list of available pictures.

Touch the DELETE soft-key to delete the picture from the hard disk drive.

10. Press the MENU hard-key twice and then touch the Picture View soft-key to enable the picture view.

The picture is now displayed on the right half of the screen.



Uconnect™ Multimedia (REMOTE DEVICES)

SIRIUS Backseat TV™ (If Equipped)

SIRIUS Backseat TV™ Mode

NOTE: SIRIUS Backseat TV™ is not available in Canada, Hawaii or Alaska.

Press the RADIO hard-key to display AM FM SAT TV at the top of the screen. Touch the TV soft-key tab to access SIRIUS Backseat TV™.

In order to receive SIRIUS Backseat TV™, the vehicle needs to be outside with a clear view to the sky. If the screen shows Acquiring Signal, you might have to change the vehicle position in order to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.



Channel List

Select LIST to display a list of available video channels. Select HIDE LIST to hide the video channel list.

View SIRIUS Backseat TV™ on the Radio Screen

NOTE: In certain states, to view SIRIUS Backseat TV™ on the radio screen, the vehicle must be stopped, and the shifter must be in PARK for vehicles equipped with an automatic transmission. In vehicles equipped with a manual transmission the parking brake must be engaged.

In order to watch the desired video, touch the VIEW VIDEO soft-key.

For vehicles equipped with VES™, refer to the Uconnect™ Multimedia/VES™ section of the Uconnect™ User's Manual on the DVD for additional details.

SIRIUS Backseat TV™ Controls



Touch anywhere on the screen to activate the video controls.



Touch the X soft-key to close the SIRIUS Backseat TV™ Controls.

Touch the LIST soft-key to display the channel list. Touch the HIDE VIDEO soft-key to display the TV mode screen.

Change a Channel

Press the seek up  or the seek down  soft-keys to play the next or previous available channel.

NOTE: Changing a channel on the Backseat TV receiver takes longer than changing the channel on the radio receiver.

Select the SCAN soft-key for a five-second preview of each available channel. Touch the SCAN soft-key again to stop the scan function.

Video Program Information

Select the INFO soft-key to display additional program information on the right half of the screen.

Select the CLOSE INFO soft-key to hide additional program information.

Video Entertainment System (VES)TM

The radio can remotely control the VESTM. For vehicles equipped with VESTM, refer to the UconnectTM Multimedia/VESTM section of the UconnectTM User's Manual on the DVD for additional details.

Receiving Audio/Video from the VESTM

You can play audio from the VESTM through the vehicle's speaker system. If you have a VESTM with a video player, you can also see the video on the radio's display, if the vehicle is parked.

The VES tab becomes available after the VESTM system (DVD player if equipped or AUX input present) is turned on. Touch the VES MODES soft-key to select the VESTM audio source.



Touch the soft-key of the desired source to play the selection in the vehicle cabin.

Availability of the DVD Player soft-key, the Rear AUX 1 soft-key, and the Rear AUX 2 is based on the type of VES™ in the vehicle.

DVD Player is not available if there is no DVD player in the VES™ or there is no DVD in the player.

A device must be plugged into the AUX jack of the VES™ to be available.

A disabled soft-key indicates an unavailable source.

Sending Audio/Video and controlling the VES™
The radio can also control the VES™.

All sources are played through the VES™ headphones.

For vehicles equipped with VES™, refer to the Uconnect™ Multimedia/VES™ section of the Uconnect™ User's Manual on the DVD for additional details.

To access the rear VES™, press the MENU hard-key on the right side of the radio.



Touch the Rear VES soft-key to display the Rear VES Controls.



The Rear VES Controls are displayed on the right half of the screen.

NOTE: Press the HIDE LIST soft-key and/or the CLOSE INFO soft-key, if you cannot see the Rear VES Controls.

The first column controls VES on/off and the headset audio channels 1 or 2.

A VES™ headset can listen to either audio Channel 1 or audio Channel 2.

1 Touch the soft-key tab 1 to select Channel 1. In this example, Channel 1 plays the Cartoon Network TV station audio.

The left half of the screen displays the audio source information which, if FM was chosen for example, a radio frequency such as 92.5 MHz would be displayed.

Touch the LIST soft-key to display the selected source details.



In this case, the FM preset list within the selected tuner is displayed.

You may touch a preset soft-key to change the station, or touch the DIRECT TUNE soft-key to enter a frequency, or press the seek up or seek down soft-keys to change the radio station.

2 Touch the 2 soft-key tab to set the desired audio source for the second VES™ audio channel. In this example Channel 2 plays MEDIA from the HDD.



The left half of the screen displays the audio source information which is, in this case, track 1 of a playlist on the HDD of the radio.

Touch the LIST soft-key to display the selected source details.



In this case, the songs within the selected playlist are displayed.



The RADIO column controls the AM/FM tuner and the SAT tuner of the radio and, if equipped, the SAT TV tuner.

NOTE: The radio cannot play both AM and FM at the same time.

The MEDIA column controls the HDD, DISC, and AUX audio source of the radio.

The VES column controls the DVD Player, Rear AUX 1, and Rear AUX 2 of the VES™ system.



Touch the on/off soft-key tab to show the VES ON/OFF display. You may turn the VES™ system on or off.



Touch the Turn Rear VES OFF soft-key to shut the VES™ off.

Touch the Turn Rear VES ON soft-key to turn the VES™ on.

VES™ LOCK

Press the LOCK soft-key to disable the controls on the VES™ remote control unit. Once the VES™ is locked, it is not possible to use the VES™ controls or the VES™ remote control.

VES™ UNLOCK

Press the UNLOCK soft-key to enable the controls on the VES™ remote control unit.

Playing a Video DVD for the Rear VES™

1. To view a DVD video on the rear VES™ radio screen, insert a video DVD.

 


The playback starts automatically after the DVD video is recognized by the disc drive.

2. Press the MENU hard-key on the right side of the radio.



3. Touch the Rear VES soft-key to display the Rear VES Controls.

 4. Touch the 1 soft-key tab to select audio Channel 1.



5. Touch the DISC soft-key to select the media mode.
6. Touch the PLAY VIDEO soft-key to start the video playback.

Playing SIRIUS Backseat TV™ for the rear VES™

1. To view a SIRIUS Backseat TV™ (if equipped) on the rear VES™ radio screen, select the TV tab in the radio mode.



2. Select a channel.

3. Press the MENU hard-key on the right side of the radio.



4. Touch the Rear VES soft-key to display the Rear VES™ Controls.



5. Touch the 1 soft-key tab to select audio Channel 1.



6. Touch the TV soft-key in the RADIO column to select the SIRIUS Backseat TV™ receiver.

License Agreements

Dolby Digital License Agreement

Manufactured under license from Dolby Laboratories.

Dolby, MLP Lossless and the double-D are trademarks of Dolby Laboratories.

Macrovision License Agreement

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

USB Connector

It is possible to transfer audio files or pictures files to the radio. Files can be on a disc or on a USB device (e.g., USB stick). The USB connector is covered by a small cover, which protects the connector from dust or damage.

NOTE: USB devices (e.g., camera memory USB adaptors, etc.) must comply with the MSD (Mass Storage Device) standard. This USB terminal can provide power to the inserted device. The current draw from these devices must be limited to 500mA or less.

The transfer speed for this USB connector is approximately two megabytes per second.

MP3 player devices cannot be controlled through the USB connector. Some player devices save music files in other formats, which cannot be played in this radio. Some copy-protected music (e.g., downloads from the internet) cannot be played on this radio.

Compatible Devices

Please see your authorized dealer or visit <http://www.chrysler.com/en/owners/mygig/> for supported devices.

NOTE: Some MP3 Players do not allow songs to be copied into other devices.

How to Open the Cover




1. Place your finger under the pull arrow.

How to Close the Cover




2. Pull forward.


NOTE: The flap is attached and should not be removed! Do not pull off of the frame. Do not use a tool (e.g., screw-driver, nail file, etc.) to open the flap, as this could cause damage to the face of the radio.

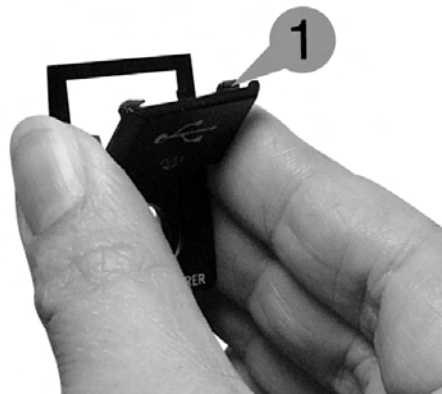

1. Using your thumb and index finger, grasp the flap. Notice the hooks (1), which must first be inserted into the frame.

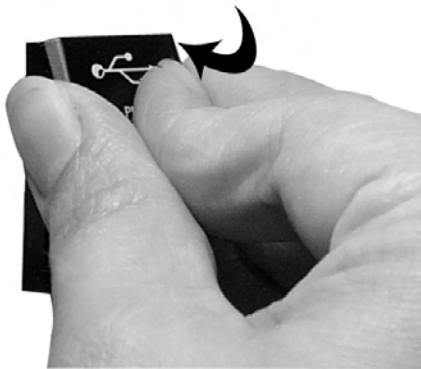

2. Hook the top hooks (1) into the frame first.

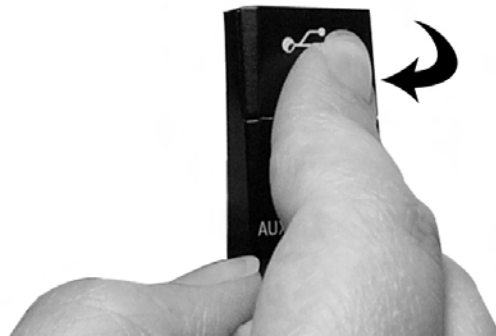

3. Then push on the bottom of the flap to secure in place.

CAUTION!

Never force any connector into the ports of your radio. Make sure your connectors are the identical shape, size and orientation before you connect.

AUX Mode

The AUX connector allows you to connect the headset output of an audio device (e.g., MP3 player) to the radio. The audio of the connected device will then be played through the radio sound system.



Connect a 3.5 mm *stereo* mini-jack cable as shown above (not provided with the radio) to the AUX connector on the radio and to the earphone connector of your audio device.

The display will switch automatically to the AUX mode when a 3.5 mm *stereo* mini-jack cable has been connected. The radio screen will revert back to the last tuner mode when the cable is unplugged.

To change radio modes while the cable is connected to the unit, press the MEDIA hard-key to display the AUX tab. Touch the AUX tab to return to the AUX mode.

Adjust the volume with the ON/OFF VOLUME rotary knob or with the volume of the attached device.

The control of the external device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead.

NOTE: Inserting of a *mono* jack will result in improper audio playback.

iPod® Mode (If Equipped)

The iPod® mode gives you access to the audio files on the external iPod®. It functions as a remote control for the

currently connected iPod® mobile digital device, and you can play audio from the iPod® device through the vehicle's speaker system.

Before using the iPod® mode, you will need to connect your iPod® device to the iPod® connector. (See the UNIVERSAL CUSTOMER INTERFACE (UCI) section in your vehicle's Owner's Manual on the DVD for instructions.)

NOTE: The files will not be stored on the internal hard disk drive and cannot be used in the HDD mode.

NOTE: It is recommended you use the latest available software for your iPod® and iTunes.

See the manufacturer's website for updates: <http://www.apple.com/support/ipod/>.

Playing Audio Files from the iPod® Device

You can play songs directly from the iPod® device.



Touch the LIST soft-key to display a list view.


Touch the soft-key with the desired list item to select and play the item.

Touch the HIDE LIST soft-key to hide the list.


Touch the BROWSE soft-key to browse by categories.

Select an iPod® Category

The radio can sort the files by playlists, by song names, by artists, by composers, by genres, by albums, by podcasts or by audio books.

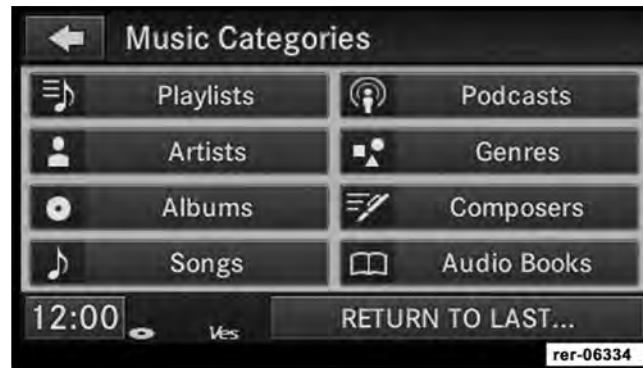

Touch the Artists soft-key for this example.

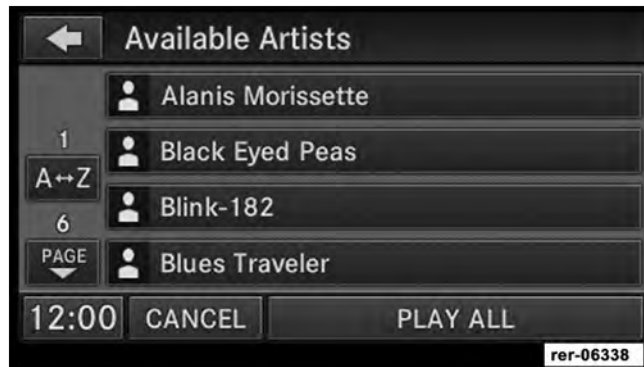

Touch a soft-key with the desired artist's name to play songs from this artist.

Touch the PLAY ALL soft-key to play songs from all available artists.

Touch the PAGE UP or PAGE DOWN soft-key to navigate through the list of artists.


List Jump

If you encounter a very long list, it may be helpful to touch the A<>Z soft-key to go to the List Jump menu.



For this example, we entered the first letter of the desired artist.

Touch the GO soft-key to jump to the desired artist.

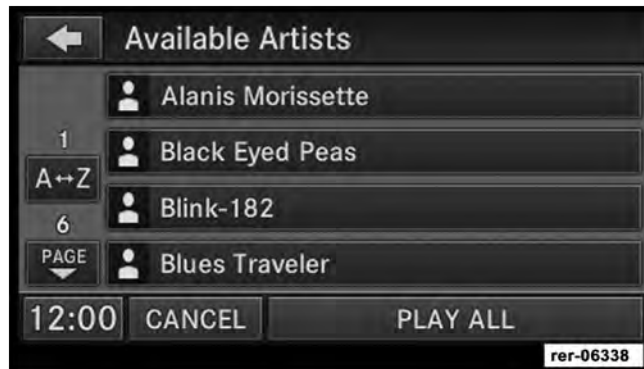

Touch a soft-key with the desired artist's name to play songs from this artist.

Change a Track

Press the forward arrows soft-key \gg to select the next track on the disc.

Press and hold the forward arrows soft-key \gg to fast forward through the track.

Press the rearward arrows soft-key \ll to select the start of the current track (while the track is playing) or the previous track (if the current track has just started).

Press and hold the rearward arrows soft-key \ll to fast rewind through the track.

Pause

Touch the PAUSE soft-key to pause the playback.

Play

Touch the PLAY soft-key to start the playback.

Displaying the Elapsed Title Time

The elapsed title time of the currently playing track is displayed on the left side of the screen.

Scan Search

Touch the SCAN soft-key.

The first few seconds of each individual track will be played in succession.

Select the STOP SCAN soft-key to stop the scan function.

Track Info

Touch the INFO soft-key.

Information on the currently playing track, if available, will be displayed on the right half of the screen.



If additional information is available, the NEXT soft-key will be displayed. Touch the NEXT soft-key to show the additional information.

iPod® Menu

While in iPod® mode, press the MENU hard-key to access the iPod® Menu.



Random Playback

The random playback function plays random tracks from the iPod® device. Touch the Random soft-key to switch the random play function on or off.

A red check mark indicates the random play function is active.

Repeat Track


The repeat track function repeats the currently played track. Touch the Rpt. TRK soft-key to switch the repeat track function on or off.

A red check mark indicates the repeat track function is active.

Uconnect™ Phone (If Equipped)



Uconnect™ Phone is a voice-activated, hands-free, in-vehicle communications system.

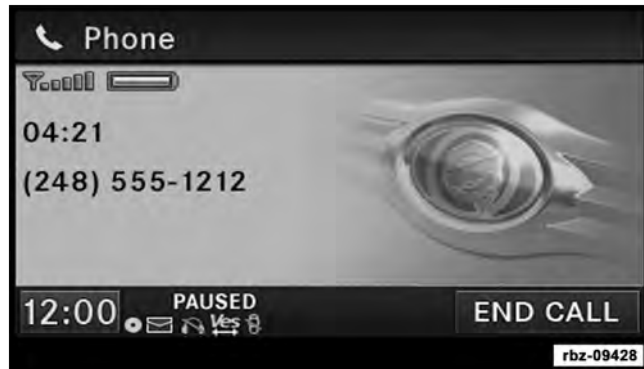


The Uconnect™ system is fully integrated with the vehicle's audio system. The radio display will be used for visual prompts from the Uconnect™ system such as phone battery status, signal strength, caller ID, and call type.

NOTE: Your phone may not support all available Uconnect™ features.

For vehicles equipped with VES™, refer to the Uconnect™ Phone section of the Uconnect™ User's Manual on the DVD for Uconnect™ Phone system operating instructions.

For vehicles not equipped with VES™ refer to your vehicle Owner's Manual on the DVD for Uconnect™ Phone system operating instructions.

 Voice Command (If Equipped)



VR


For vehicles equipped with VES™, refer to the Uconnect™ Multimedia/Voice Command section of the Uconnect™ User's Manual on the DVD for Voice Command system operating instructions.

For vehicles not equipped with VES™, refer to your vehicle Owner's Manual on the DVD for Voice Command system operating instructions.

SYSTEM INFORMATION

Press the MENU hard-key on the right side of the radio, and touch the System Setup soft-key to access the System Setup menu.

Touch the System Information soft-key to access the system information.

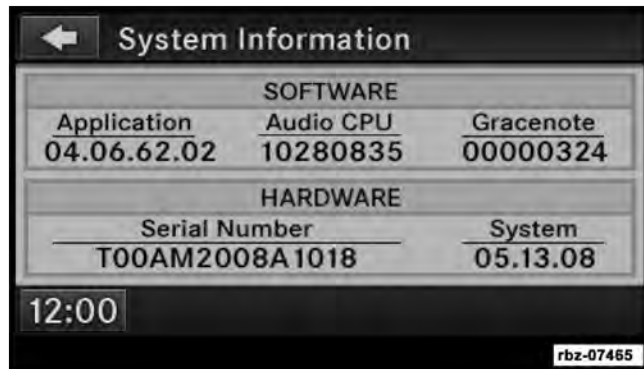

User Data Backup

Visit <http://www.chrysler.com/en/owners/mygig/> for information on how to backup or transfer your user data, such as music files, etc., before returning or changing to a vehicle with a compatible radio (e.g., end of lease).

Software and Database Updates

Visit <http://www.chrysler.com/en/owners/mygig/> for information on available software and database updates.

Updates are available for the radio software, and the Gracenote® music recognition technology database.

Please read the specific instructions on the update discs before installing the updates.

Contact your local authorized dealership if you need help or more information about the available updates.

TROUBLESHOOTING

Radio

Q.: I cannot find my favorite radio station that I was always able to receive before. What can I do?

A.: Select MUSIC TYPE while in radio mode. Select CLEAR to disable all PTY filters, and try to SEEK for your station.

Disc

Q.: The radio does not display the information for the disc I inserted. How do I access this information?

A.: The radio will search the internal Gracenote® music recognition technology database on the hard drive for the inserted disc. If the database is out of date, or the

database does not contain the particular disc, the information cannot be displayed. Contact your local authorized dealership or website <http://www.chrysler.com/en/owners/mygig/> for available updates.

HDD

Q.: The radio is playing songs from the HDD, it jumps to the first song in the list. Why does it do that?

A.: After the radio is done copying or ripping music to the HDD, it needs to rebuild the current playlist. After the playlist is rebuilt, the radio starts to play the first song in the current playlist.

GLOSSARY OF TERMS

AAC	Advance Audio Coding
CD	Compact Disc
CDC	Compact Disc Changer
CDDB	A technology company founded in 1995 as CDDB, Inc. The company has been renamed to Gracenote®, Inc. The technology has been renamed to the Gracenote® media recognition service.
DVD	Digital Versatile Disc
DVDC	Digital Versatile Disc Changer

GMD	Gracenote® Media Database, Gracenote® Media Recognition Service (www.gracenote.com)
GMT	Greenwich Mean Time
HDD	Hard-Disk Drive
MFB	Multifunction soft-key
MFS	Multi-Functional Steering Wheel
MP3 MPEG-1 Audio Layer-3.	Compression scheme used to transfer audio files via the Internet and store in portable players and digital audio servers.

M4A	The.M4A format is actually the audio layer of (non-video) MPEG 4 movies.
M4P	The.M4P format is an audio file purchased from Apple's Music Store (iTunes) and is protected by a Digital Rights Management scheme.
POS	Position
PTY	Program type (radio)

RBDS	Radio Broadcast Data System
SAT	Satellite Radio
TV	Satellite Video
UTC	Universal Coordinated Time
VES TM	Video Entertainment System TM
WMA	Windows Media Audio Format

Chrysler Group LLC
10RBZ-526-ENG-AB



2nd Edition

Printed in U.S.A.